

用户手册

(2) 在质保期内,非人为损坏,免费维修。

(5) 保修凭证与产品型号不符或保修凭证被涂改。

2.如下情形非保修范围,如需提供维修服务,可酌情收取物料及服务费用

(4) 未按使用说明书要求安装、使用、维护、保管导致的产品故障或损坏。

(6) 产品铭牌、SN条码、防拆标签被撕掉或被损坏,模糊不清无法识别。

(8) 由于不可抗因素(如火灾、地震、水灾等)而造成的故障或损坏。

电话:400-830-4882

本章首先教导您如何将设备准备好,以便让您开始工作。接着概略地介绍设备的外观和组件。

- 👤 地址:深圳市坪山区光科一路8号亿道大厦
- 3) 质保范围是指产品在正常使用下出现问题。 备注:外观问题不属于保修范围
- (1) 退换货、送修途中由于运输、装卸所导致的损坏。
- (3) 意外因素或人为行为导致产品损坏。如:进液、摔损、输入不合适电压、过度挤压、主板变形等。
- 电源适配器,若有明显的硬物损伤、裂痕、断脚、严重变形,电线破损、断线、裸芯等现象。

- (3) 因产品不符合保修条件需收取费用的,授权服务中心将向消费者收取维修费。

注意: 仅限使用本产品随附的电源适配器。使用其他电源适配器可能会损坏您的设备。

第一次开机时必须连接 DC 电源。

- 打开包装后,您应该会看到下列标准项目: ·M80N加固平板电脑·电源适配器·绑带

- (1) 送修前,请您提前备份个人数据。维修过程中可能会造成您个人数据的丢失,我们会保护您的个人隐

设备外观介绍



ONERugged

深圳市亿道信息股份有限公司

2.将电源线的母端口端插入电源适配器,公端口端插入电源插座。

1.电源适配器的 DC头 插入设备的DC口内。

1.接上电源后加固平板电脑将自动开机。无需手动按下开机按键,操作系统 Microsoft Windows 将启动

3.电源插座通过适配器为设备供电。现在您可以打开设备电源。









注: 1.依照所购买的型号不同,设备外观可能和本手册所显示的结构有所不同。





用来接收外来的声

| | | 符号 | 组件 |
|--|---|----|----------|
| 义)。 | | 0 | USB3.0端 |
| 方式。 | | 0 | 3.5mm音频 |
| e de la companya de l | | • | HDMI端口 |
| 0 | | • | Type-C端口 |
| | 6 | | |

用于拍摄获取前置画面。 开机时蓝灯常亮; 待机休眠时蓝灯闪烁



| 符号 | 组件 | |
|----------|-----------|-------|
| 0 | USB3.0端口 | 连 |
| 2 | 3.5mm音频端口 | ĕ |
| € | HDMI端口 | 连接HDI |
| 0 | Type-C端口 | 连接 |



| 组件 | 说明 |
|-----------|----------------|
| USB3.0端口 | 连接USB设备。 |
| 3.5mm音频端口 | 连接音频 设备 |
| HDMI端口 | 连接HDMI显示器或投影仪。 |

| Fil | • | 3.311111日刎猵口 | 上按日侧 反笛 | |
|------|---|--------------|----------------|----|
| Juj. | • | HDMI端口 | 连接HDMI显示器或投影仪。 | |
| | | | | 符号 |
| | 0 | Type-C端口 | 连接 USB-C的设备。 | 0 |
| | | | | |



将电池取下,在此位置取下卡座, 插入TF 卡+Micro Sim卡,NC卡槽暂时不提任何供功能。 将TF卡和NanoSIM卡放入指定位置后重新插回即可使用,如下图



电源适配器仅供您的设备使用。若挪作其它用途将可能损坏接上的电器或者适配

适配器受到外部电压冲击而受损。

·拔掉插头时,请垂直 90° 插拔,切勿拉扯电线,应用手握着插头拔出。


·电源适配器所附的电源线为符合购买地的规格。若要在国外使用此设备,请咨询经销商取得合适的电源

·若欲拔开电源适配器时,必须先拔掉墙壁上的电源插头,再拔掉插在手持机上的电源接头,否则会使设备及

本章告诉您在面临一般性问题时,该尝试甚么方法来解决。

- ·确定 BIOS中的设置完全正确 ·确定所有驱动程序已安装完成。
- ·细观察实际的状况。屏幕上是否出现任何信息?指示灯的亮灯情形为何?当您必须寻求维修人员的帮忙时,
- 如果按照本章中的说明进行操作后问题仍然存在,请与授权经销商联系以寻求帮助。

设备问题可以是硬件、软件、或两者共同引起的。当您遭遇问题时,它可能只是一个一般性问题,能够轻易就

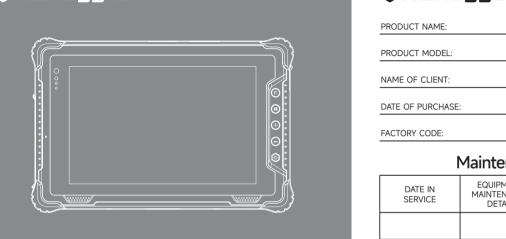

YOUR ONE-STOP RUGGED COMPUTING SOLUTION

M80N

· M80N Rugged Tablet PC · Power Adapter · Hand Strap

| MAINTENANCE DATE | MAINTENANCE PERFORMED BY | manual. (5) The warranty certificate does not match the product model or has been al (6) The product nameplate, SN barcode, and tamper-proof label are torn off o |
|---------------------|-----------------------------|--|
| | | blurred and unrecognizable. (7) The product is out of warranty. (8) Failure or damage caused by irresistible factors (such as fire, earthquake, |
| | | Repair Service Guide |
| | | (1) Before sending for repair, please back up your personal data in advance. Y lost during the maintenance process. We will protect your personal privacy, b |
| | | responsible for the damage or loss of personal data during the maintenance ((2) When sending for repair, the product must be professionally inspected by center. After confirming the fault, the service center will determine the corres |
| | | plan. For detected non-faulty products, it will be returned as is. (3) If a fee is charged because the product does not meet the warranty condit |

NERugged

IING ON AND OFF THE DEVICE

1. Insert the DC head of the power adapter into the DC port of the device.








 
shown in this manual.

The power outlet supplies power to the device through an adapter. Now you can power on the device.

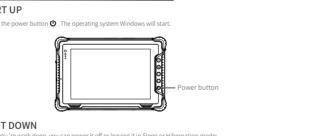








36 Stereo speakers

 
Solid blue light when powered on; Flashing blue light in standby/sleep mode Solid red light when charging. Used to receive external sounds.



| | STWIDUL | COMPONENTS | |
|--|---------|------------------|--|
| | 0 | USB3.0 Port | |
| RC RC | 0 | 3.5mm Audio Port | |
| ************************************** | • | HDMI Port | |
| • 1 | 0 | Type-C Port | |



| To lock the internal battery. | 0 | Modular Interface | М |
|-------------------------------|---|-------------------|---|
| | | | |

 

| 1 | | | I | | |
|---|------------------|--|---|--------|-------|
| 0 | USB3.0 Port | Connects USB devices. | | SYMBOL | СОМ |
| 0 | 3.5mm Audio Port | Connects audio devices. | | 0 | F |
| 6 | HDMI Port | Connects an HDMI display or projector. | | | |
| 0 | Type-C Port | Connects USB-C devices. | | • | Posit |

use this device abroad, consult your dealer for a suitable power cord.

from 100V to 240V AC and the output is 19V.

· Make sure the settings in the BIOS are completely correct.

· Make notes of your observations. Does any message appear on the screen? What is the status of the

This chapter tells you what actions to take when solving common computer problems.

If any problem persists after you follow the instructions in this chapter, contact an authorized dealer for